

UNIQUE

Thermal Imaging Monocular



User Manual

UL35 / UH35 / UH50

V2.0

IMPORTANT SAFETY INFORMATION

Environmental influences

WARNING! Never point the lens of the device directly at intense heat sources such as the sun or laser equipment. The objective lens and eyepiece can function as a burning glass and damage the interior components. The warranty does not cover damage caused by improper operation.

Risk of swallowing

Caution: Do not place this device in the hands of small children. Incorrect handling can cause small parts to come loose which may be swallowed.

Safety instructions for use

- Handle the device and Battery Pack with care: rough handling may damage the Battery Pack.
- Do not expose the device to fire or high temperatures.
- Only use the battery charger included in the delivery package.
- The battery capacity decreases when operated in a cold ambient temperature. This is not a fault and occurs for technical reasons.

- Always store the device in its carrying bag in a dry, well-ventilated space. For prolonged storage, remove the batteries.
- Do not expose your device to extreme temperatures lower than - 20°C and higher than + 50°C.
- The product shall only be connected to a USB Type C interface.
- If the device has been damaged or the battery is defective, send the device to our after-sales service for repair.

Safety instructions for the power supply unit

- Check the power supply unit, cable and adapter for visible damage before use.
- Do not use any defective parts. Defective components must be replaced.
- Do not use the power supply unit in wet or humid environments.
- Only use the original cable provided with the battery charger.
- Do not make any technical modifications.

Disposal of batteries



Directive 2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal

waste in the European Union. For battery details, refer to the documentation of the specific product. The battery is marked with this symbol, which may include Cd (indicating cadmium), Pb (indicating lead), or Hg (indicating mercury). For proper recycling, please return the battery to your supplier or send it to a designated collection point. For more information, visit www.recyclethis.info.

User information on the disposal of electrical and electronic devices (private households)



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.

For business customers within the European Union

Please contact your dealer or supplier regarding the disposal of electrical and electronic devices. He will provide you with further information.

Information on disposal in other countries outside of the European Union

This symbol is only applicable in the European Union. Please contact your local authority or dealer if you wish to dispose of this product and ask for a disposal option.

Intended use

The device is intended for displaying heat signatures during nature observation, remote hunting observations and for civil use. This device is not a toy for children.

Use the device only as described in this instruction manual. The manufacturer and the dealer accept no liability for damages which arise due to non-intended or incorrect use.

Function test

- Before use, please ensure that your device has no visible damage.
- Test to see if the device displays a clear, undisturbed image.
- Check that the settings for the thermal imaging monocular are correct.
See the notes in the section 9 Power On and Image Settings.

Installing/removing the battery

The UNIQUE series thermal imaging monocular is equipped with a Battery Pack. The Battery Pack can be moved and charged, referring to the Section **Battery Pack** for details.

1 Specification

Model	UL35	UH35	UH50
Detector Specifications			
Type	Uncooled Vo _x		
Resolution, pixels	384×288	640×512	
Pixel size, μm	12		
NETD, mk	≤ 25		
Frame rate, Hz	50		
Optical Specifications			
Objective Lens, mm	35	35	50
Field of View (H×V), °	7.5×5.7	12.5×9.4	8.8×6.6
Linear Field of View (H×V), m at 100m	13×10	22×16	15×12
Magnification, ×	5 ~ 20	3 ~ 12	4 ~ 16
Detection Range, m (Target size: 1.7m×0.5m, P(n)=99%)	1800	1800	2600
Eye Relief, mm	20		
Exit pupil Diameter, mm	5.5		
Dioptr, D	-5 ~ +5		
Display Specifications			
Type	FHD AMOLED		
Resolution, pixels	1440×1080		

Battery Power Supply		
Battery	Replaceable li-ion battery Pack IBP-1/4400Ah	
Max. Operating Time*, h	12 (t=22 °C)	10 (t=22 °C)
External Power Supply	5V (Type C)	
Physical Specifications		
Wi-Fi / APP	Support (InfiRay outdoor)	
Photo / Video Recorder	Support	
MIC	Support	
Memory Capacity, GB	32	
IP Rating	IP67	
Operating Temperature, °C	-20 ~ +50	
Weight, g	≤ 540	≤ 650
Dimension, mm	195×65×60	205×65×60

- ★ The actual operating time depends on the density of Wi-Fi use, photographing, video recording, etc.
- Improvements may be made to the design and software of this product to enhance its features without prior notice to the customer.
- The newest user manual can be downloaded at our official website: www.infirayoutdoor.com.

2 Package Contents

- UNIQUE Series Thermal Imaging Monocular
- Portable bag
- IBP-1 Battery Pack × 2
- IBC-1 battery charger for Battery Pack
- Power adapter
- Data cable
- Neck Strap
- Wrist strap
- Lens cleaning cloth
- Quick Start Guide

3 Description

The UNIQUE series thermal imaging monocular is a thermal imaging handheld product integrating thermal observation, photographing and video recording, Wi-Fi connection, etc. This enormously facilitates the target search. Adopting the principle of thermal imaging, it does not need

external light sources and is not affected by strong light. You can use it to observe objects hidden behind such obstacles as branches, tall grass, and shrubs, regardless of the night or the day with harsh weather (such as rain, snow, fog, and haze). It can be widely applied in night hunting, observation, geographical positioning, searching, and rescuing operations.


4 Features

- 12μm self-developed detector
- High image quality
- FHD OLED (1440×1080)
- Rechargeable Battery Pack for quick replacement
- 50Hz high frame rate
- Eyepiece supporting 20× zoom
- Digital zoom: 1×/2×/3×/4×
- Built-in 32G memory space, supporting photographing and video recording
- Built-in Wi-Fi module, supporting InfiRay outdoor App
- Ultraclear mode





- Supporting PIP, defective pixel correction, and other functions
- Convenient operation interface

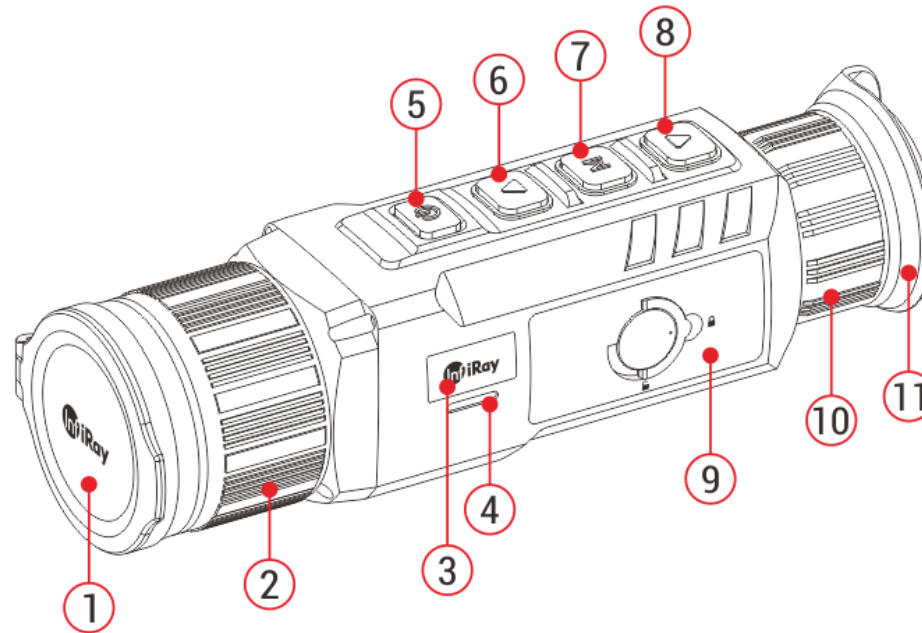5 Components and Buttons

1. Lens cap
2. Lens focus ring
3. Status Light
4. Microphone/Altimeter
5. Power (P) button
6. UP button
7. Menu (M) button
8. Down button
9. Battery Pack
10. Eyepiece
11. Eyeshade



6 Button Operations

Button	Current Status	Short Press	Press and Hold
Power button 	Powered off	—	Power on the device
	Home screen	Standby the device	Power off the device
	Standby mode	Wake up the device	—
	Main menu interface	Return to the upper menu without saving changes	—
	Defective pixel correction interface	Add/delete defective pixels	—
Up button 	Home screen	Digital zoom	Turn on/off the PIP function
	Menu interface	Navigation upwards	—
Menu button 	Home screen	Open the shortcut menu	Go to the main menu
	Shortcut menu interface	Switch and confirm parameters	Save and back to the home screen
	Main menu interface	Enter the submenu / Switch and confirm the parameters	
	Defective pixel correction interface	Confirm selection / Save the position	—
Down button 	Home screen	Take a photo	Start a video recording
	Menu interface	Navigation downwards	—
	Video recording	Take a photo	Stop and save the video
Up + M buttons	Home screen	—	Turn on/off the stadiametric rangefinder

7 Battery Pack


The UNIQUE series uses the rechargeable lithium-ion Battery Pack IBP-1, which has a battery life of 10 hours. Please charge the Battery Pack before first use.

Method 1: Charging with Battery Charger


- Align the pins **(A)** of the Battery Pack **(9)** with the groove **(B)** of the battery charger **(13)**, and insert the Battery Pack **(9)** into the battery charger **(13)**.
- Connect the Type-C plug of the data cable **(14)** to the port **(C)** of the battery charger **(13)**.
- Connect the other plug of the data cable **(14)** to the USB port of the power adapter **(15)**.
- Insert the power adapter **(15)** to a 100V - 240V power socket **(16)** to charge the Battery Pack.
- Upon installation, the LED indicator **(D)** on the Battery Pack charger **(13)** will start to glow or blink.
 - If the indicator is steady red, the Battery Pack is being charged.

- If the indicator turns green, the Battery Pack is fully charged.
- If the indicator blinks red, the battery charging holder is connected to the power source but there is no installed Battery Pack.

- After fully charged, remove the Battery Pack from the battery charger **(13)**.

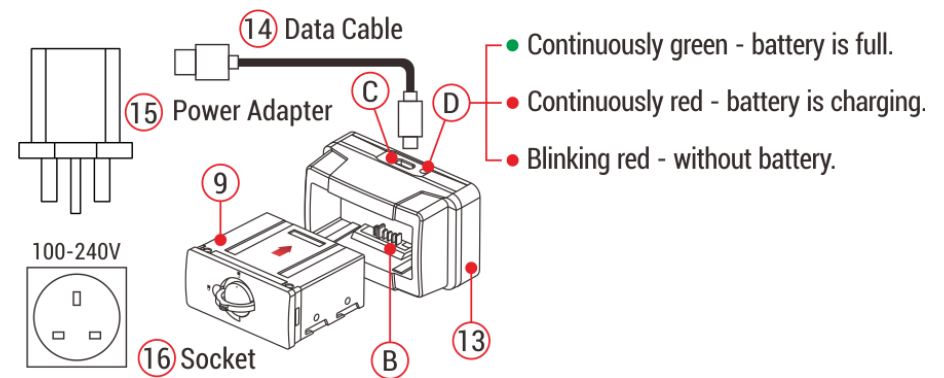


Method 2: Charging with Type-C Port

- Open the Type-C port cover **(17)** on the bottom of the UNIQUE series.
- Connect the Type-C end of the data cable **(14)** to the Type-C port **(17)**.
- Connect the other end of the data cable **(14)** to the power adapter **(15)**.
- Plug the adapter into a 100-240v power socket **(16)** for charging.
- The battery icon will be changed to the charging icon  on the

display.


- During charging the Battery Pack with the Type C port, the status light **(3)** on the UNIQUE series will change also to display the battery status.
 - If the status light is steady orange, the Battery Pack is being charged.
 - If the status light turns green, the Battery Pack is fully charged.

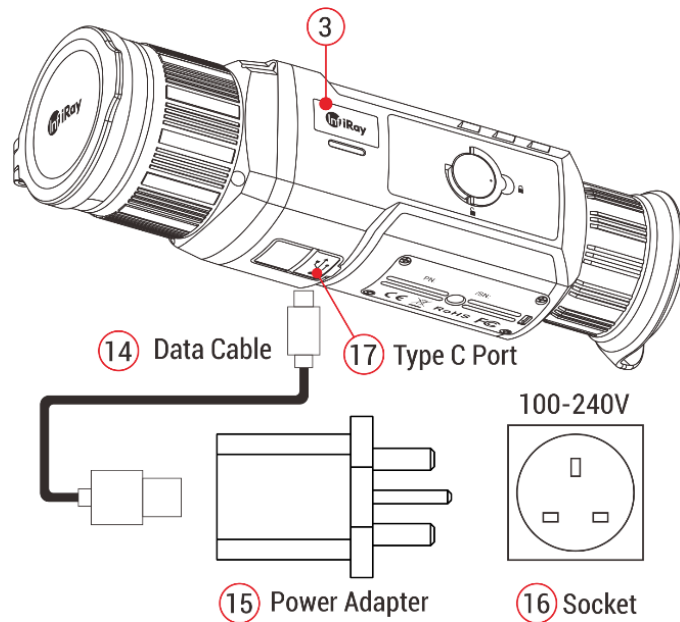

Battery Pack Installation

- Pull out the ring-pull **(12)** from the Battery Pack **(9)**, rotate it clockwise

until it is in the horizontal direction with the Battery Pack **(9)**.

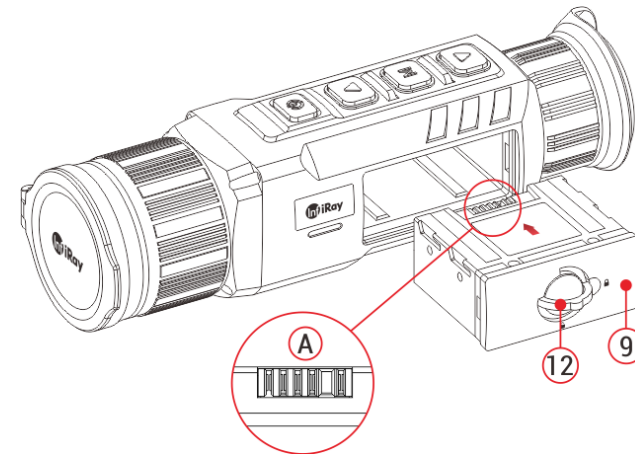

- Align the pins **(A)** of the Battery Pack **(9)** with the groove of the device to install the Battery Pack **(9)** into the UNIQUE series thermal monocular.
- When the Battery Pack **(9)** is fully inserted into the case of the UNIQUE series thermal camera, rotate the ring-pull **(12)** 90 degrees counter-clockwise to lock the Battery Pack **(9)**. The ring-pull **(12)** is in the vertical position.
- Upon installation, flip down the ring-pull **(12)**. When the bulge on the ring-pull **(12)** points to 'CLOSE' on the Battery Pack **(9)**, the Battery Pack **(9)** is installed.
- The UNIQUE series can only be powered by this Battery Pack **(9)**. If

other Battery Packs are used, it may cause irreparable loss, damage the device, and even may cause fire.

Precautions for Battery Pack

- **Only use the Battery Charger (13) supplied with the Battery Pack (9).** The use of any other charger may irreparably damage the Battery Pack or the charger and may cause fire.
- **After a long storage time, the battery should be partially charged, not fully charged or discharged.**
- Do not charge the battery immediately after you bring it from the cold environment to the warm environment. Wait 30 to 40 minutes for it to warm up.
- Do not charge the battery unsupervised.
- Do not use the charger if it is modified or damaged.
- Charge the battery in the environment of 0°C to +45°C. Otherwise, the service life of the battery will be reduced.
- Charging time should not exceed 24 hours.
- Do not expose the Battery Pack to high temperature or a naked flame.
- Do not immerse the Battery Pack in water.



- Do not connect external device with a current consumption that exceed permitted levels.
- The Battery Pack is equipped with a short circuit protection function. However, any situation that may cause short-circuiting should be avoided.
- Please do not disassemble or modify the Battery Pack without professional instructions.
- Do not knock or drop the Battery Pack.
- The battery capacity may decrease when using the battery in negative temperature, that is normal, not a defect.
- Avoid using the Battery Pack at the temperature above the temperature shown in the table, this may decrease the battery back's life.
- Please keep the Battery Pack out of the reach of children.

8 External Power Supply

The UNIQUE series can be powered with an external power supply, such as a Power Bank (5V).

- Connect the external power supply to the Type-C port **(17)** on the

bottom of the UNIQUE series.


- The device will switch to the external power supply and charge the internal Battery Pack at the same time.
- The battery icon will be changed to the charging icon  .
- If the device is connected to an external power source and no Battery Pack is installed, the battery icon will be changed to the USB icon .
- When the external power supply is disconnected, the UNIQUE series will automatically switch to the Battery Pack without powering off.

9 Power On and Image Settings

- Remove the lens cap (1).
- Press and hold the **Power button (5)** to power on the device. Then, the home screen is displayed after several seconds.
- Rotate the eyepiece diopter ring (10) until the image becomes clear in the eyepiece. After the adjustment, it no needs to be adjusted for the same user.
- Rotate the focusing ring (2) of the objective lens to focus on the object

to be observed.

- To set the image mode, display brightness, image sharpness, image contrast, refer to the **Shortcut Menu** section in this manual.
- After use, press and hold the **Power button (5)** and a shutdown countdown is displayed. Release the button after the countdown. The thermal camera is turned off.

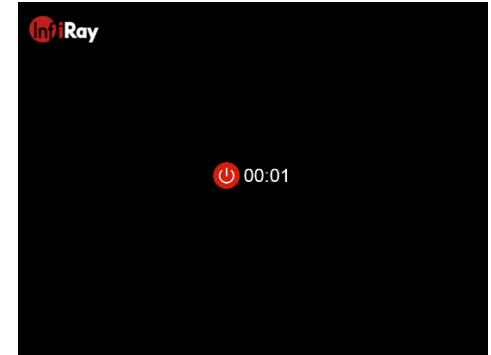










10 State Bar



The status bar is on the top of the display to indicate the current operation status of the thermal camera. The display content from the left to the right are as follows:

1. Current image mode (☀️ : white-hot; 🌙 : black-hot; 🔥 : red-hot; 🐦 : pseudo-color; 🐦 : highlight)

- 2. Ultraclear mode status: : the ultra-clear mode is off; : the ultra-clear mode is on)
- 3. Current magnification (such as 4×)
- 4. Calibration mode (A: automatic shutter calibration; M: manual shutter calibration)
- 5. Video output (when it is on)
- 6. Wi-Fi status (: Wi-Fi is off; : Wi-Fi is on)
- 7. Time
- 8. Battery Pack status

Icon	Color/Status	Battery Status
	Green	more than 40%
	Yellow	20% - 40%
	Red	Less than 20%, need to charge instantly
	Lightning icon inside	External power supply meanwhile charging the Battery Pack
	USB icon	External power supply without Battery Pack in the UNIQUE

11 Calibration

Benefit from the shutterless thermal imaging core, UNIQUE series capture high-quality images without a mechanical shutter.

In rare cases, once the image is degraded or uneven, it can be improved by calibration. There are two calibration modes:

- On the home screen, briefly press the **Up button (6) + Down button (8)** to perform the calibration without closing the lens cap (the internal shutter covers the sensor).
- Close the lens cap press and hold down the **Up button (6) + Down button (8)**. A text prompt reading “Cover lens during calibration” will appear on the screen. The background calibration will start after 2s.

12 Digital Zoom

The UNIQUE series supports quick digital zoom-in for images, to increase visual magnification.

- On the home screen, briefly press the **Up button (6)** to circularly zoom the image.



- The corresponding magnification is displayed in the status bar.
- The following table lists the visual magnifications corresponding from the 1× to 4×.

Model	Focal Length	Digital Zoom			
		1×	2×	3×	4×
UL35	35mm	5	10	15	20
UH35	35mm	3	6	9	12
UH50	50mm	4	8	12	16


13 Photographing and Video Recording

The UNIQUE series thermal camera is equipped with a built-in 32GB memory storage and supports photographing and video recording. The image and video files will be named after time, so it is recommended to set the system date and time in the Main Menu before using the photo and video functions (refers to **Main Menu - Settings - Date/Time Setting** in this manual), or to synchronize the system date and time in the settings of the InfiRay Outdoor App. For details, refer to the Operating Instructions for the App in our official website (www.infirayoutdoor.com).

Photographing

- On the home screen, press the **Down button (8)** to take a photo. The image freezes for 0.5 sec with a camera icon  flash on the upper left corner. After the image is taken, the icon disappears.
- The images taken are saved in the built-in memory storage.
- When the exclamation mark icon  appears on the right side of the camera icon, it prompts that the memory space is insufficient. Check and transfer your videos and images to other media to free up the space.

Video Recording

- On the home screen, press and hold the **Down button (8)** to start the video recording.
- The recording icon  and recording time prompt are displayed on the upper left corner of the display, and the time is in the format of HH: MM: SS (hour: Minute: Second).



- The red dot on the left of the time prompt will flash continuously when recording.
- During recording, you can also take a photo by pressing the **Down button (8)**.
- Press and hold the **Down button (8)** to stop and save the video. Recording.
- All videos and photos will be saved in the built-in memory storage.
- UNIQUE series is built-in Microphone function, which will be automatically enabled when starting a video recording, and the microphone icon is displayed in the status bar on the top of the screen.
- When turning off the video recording function, the microphone function is turned off and the icon in the status bar is disappeared automatically.



Note

- You can enter and work on the menu during video recording.
- The image taken and the recorded video will be respectively saved in the names in the formats of IMG_yyyyMMddHHmmss.jpg and VID_yyyyMMddHHmmss.mp4 in the built-in memory card (yyyyMMddHHmmss - year, month, date, hour, minute, and second);

- The maximum duration of a video recording file is 30 minutes. When the duration is more than 30 minutes, the video will be automatically recorded onto a new file.
- Due to the limitation of the storage space, it is recommended that you clean the memory regularly or move the images and videos to other storage medium to release memory space of the device.

Memory Access

When the device is powered on and connected to a computer, it will be recognized by the computer as a flash memory card. Then, you can access the memory of the device and copy images and videos.

- Connect the device to a computer through the data cable.
- Power on the device.
- Double-click "My Computer" on the desktop - double-click to open the device named "Infiray"  - then double-click to open the device name "UNIQUE_Storage"  to access the memory.
 26.1 GB 可用, 共 27.5 GB
- Files named by time will be displayed after you access the memory.

14 Shortcut Menu

On the shortcut menu, you can quickly adjust basic configurations of commonly used functions, including the image mode, display brightness, image sharpness, and image contrast.

- In the home screen, press the **M button (7)** to go to the shortcut menu.
- Press the **Up (6) / Down (8)** button to switch the following options.



- **Image mode:** Press the **M button (7)** to change the image mode (white hot, black hot, red hot, pseudo-color, and highlight).
- **Image brightness:** Press the **M button (7)** to change the image brightness from level 1 to level 5.
- **Image sharpness:** Press the **M button (7)** to change the image sharpness from level 1 to level 5.
- **Image contrast:** Press the **M button (7)** to change the image contrast from level 1 to level 5.

- Press and hold the **M button (7)** to save the changes and return to the home screen.

Note: In the shortcut menu, if there is no operation within 5s, the device will automatically save the changes and return to the home screen.

15 Main Menu

- In the home screen, press and hold the **M button (7)** to go to the main menu.
- Press the **Up (6) / Down (8)** button to switch the menu options.
- The function options in the main menu are cyclical: when the arrow > reaches the last option on the first page, it will turn to the first menu option on the second page. When the arrow > is on the first option of the first page, press the **Up (6)** button to switch to the last option of the second page.
- Press the **M button (7)** to modify the parameter settings of the current menu option or to open the submenu.
- In the second and third-level submenu, press the **Up (6) / Down (8)** button to choose a parameter or function; press the **M button (7)** to




confirm the selection. An icon flashes, indicating the changes are being saved, and then the upper menu or the submenu is displayed;






- In any menu interface, press the **Power button (5)** to return to the upper menu or home screen without saving the changes, and press and hold the **M button (7)** to save the changes and return to the home screen.
- In any menu interface, the device will automatically return to the home




screen without saving the changes when there is no operation within 15s.

- During the continuous operation of the thermal camera, when you exit from the main menu, the cursor > remains at the position before exiting. When you restart the thermal camera and go to the main menu for the first time, the cursor stays at the first menu option.

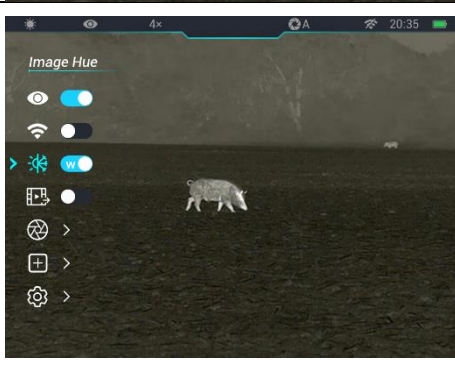Main Menu Options and Descriptions

<p style="text-align: center;">Ultra-clear</p> 	<p>Turn the Ultra-clear mode on/off</p> <ul style="list-style-type: none"> ● Press and hold down the M (7) button to enter the main menu. ● Select the Ultra-clear menu option with the Up (6) / Down (8) button. ● Turn the Ultra-clear mode on /off with a short press of M (7) button, during which you will hear a click of shutter calibration. ● When the function is turned on/off, the icon in the status bar changes accordingly. ● When the Ultra-clear mode is on, the image contrast is enhanced, which is suitable for rainy, foggy and other harsh weather conditions. 	
<p style="text-align: center;">Wi-Fi</p> 	<p>Turn Wi-Fi on/off</p> <ul style="list-style-type: none"> ● Press and hold down the M (7) button to enter the main menu. ● Press the Up (6) / Down (8) button to select the Wi-Fi option. 	

	<ul style="list-style-type: none"> ● Turn the Wi-Fi on /off with a short press of M (7) button ● When Wi-Fi is on, the default password is prompted for 3s behind the icon of Wi-Fi. ● The default password is 12345678, and it will be only displayed for the first three times. After the password is changed, it will not be displayed. ● When the function is turned on/off, the icon in the status bar changes accordingly. 	
<p>Image Hue</p> 	<p>Set the image hue</p> <ul style="list-style-type: none"> ● Press and hold down the M (7) button to enter the main menu. ● Press the Up (6) / Down (8) button to select the Image Hue option. ● Briefly press the M (7) button to switch the Image Hue between W (warm) and C (cool). ● Cool color image is brighter and warm color image is softer and eye protection. ● The switch between the warm and cool hues is not applicable to the Rainbow mode. 	
<p>Video Output</p> 	<p>Turn video output on/off</p> <ul style="list-style-type: none"> ● Press and hold down the M (7) button to enter the main menu. ● Press the Up (6) / Down (8) button to select the Video Output option. ● Briefly press the M (7) button to turn video out on/off. ● After video output is on, the video output icon is displayed in the status bar on the top. 	
<p>Auto Calibration</p> 	<p>Turn auto-calibration on/off</p> <ul style="list-style-type: none"> ● Press and hold down the M (7) button to enter the main menu. 	

	<ul style="list-style-type: none"> ● Press the Up (6) / Down (8) button to select the Auto Calibration option. ● Briefly press the M (7) button to enter the submenu of the Calibration function. ● Press the Up (6) / Down (8) button to switch the selection between Automatic and Manual. <ul style="list-style-type: none"> - Automatic Calibration: It is defined by software algorithms. When the Image quality deteriorates, it will be calibrated automatically in this mode. - Manual Calibration: Images are calibrated by the user according to the image effect. You need to briefly press the Up button (6) + Down button (8) at the same time to perform the calibration. ● Briefly press the M (7) button to confirm your selection. The icon on the status bar changes accordingly. 	
<p>Pixels Defect Correction</p> 	<p>Correcting the defective pixels</p> <p>When using the thermal camera, you may see defective pixels, such as visible light spots or dark spots with stable brightness. To address this problem, use the defective pixel correction function to remove the defective pixels.</p> <ul style="list-style-type: none"> ● Press and hold down the M (7) button to enter the main menu. ● Press the Up (6) / Down (8) button to select the Pixels Defect Correction option. ● Press the M (7) button to enter the defective pixel correction interface. The PIP function is automatically turned on, and displayed on the lower-left corner by default. ● The right side of the PIP window shows the cursor moving direction (X-axis, Y-axis), and number of defective pixel correction. ● Press the M (7) button to change the moving direction, and press the Up (6) / Down (8) button to move the cursor. 	

- You can repeat the preceding steps to change the cursor location until it reaches the position of the defective pixel.
- Press the **Power (5)** button to add a defective pixel. In the PIP window, the word "**Add**" is displayed, and the defective pixel is added.
- At the same position, you can revoke the defective pixel correction by pressing the **Power (5)** button again. **Del** is displayed in PIP window.
- Each time you add or delete a defective pixel, the number of defective pixels changes accordingly.
- When the cursor moves near PIP, PIP and the content on the right will move to the upper left corner automatically.
- After the correction, press and hold the **M (7)** button until a prompt is displayed to confirm whether to save the correction.
- Press the **Up (6) / Down (8)** button to select Yes or No. Choose **Yes** to save the correction and exit and choose **No** to cancel the correction and exit.
- Briefly press the **M (7)** button to confirm your selection and exit.



Settings

Setting the general settings

- Press and hold down the **M (7)** button to enter the main menu.



- Press the **Up (6) / Down (8)** button to select the **Settings** option.
- Briefly press the **M (7)** button to enter the submenu.
- This menu item allows you to configure the following settings.

Date



Setting the system date

- In the **Settings** submenu, select the **Date** menu option with the **Up (6) / Down (8)** button.
- The date is in the format of **YY/MM/DD**.
- Briefly press the **M (7)** button to active the **Date** submenu. Two triangle icons will appear above and below the value.
- Switch among the year, month, and day with a short press of the **M (7)** button.
- Set the correct year, month, and day with a short press of the **Up (6) / Down (8)** button.
- Press and hold down the **M (7)** button to save and exit.







Time




Setting the system time



- In the **Settings** submenu, select the **Time** menu option with the **Up (6) / Down (8)** button.
- The time format is displayed as **HH:MM** in 24-hours format.
- Briefly press the **M (7)** button to active the **Date** submenu. Two triangle icons will appear above and below the value.



		<ul style="list-style-type: none"> ● Select the correct value for the hour and minute with a short press of the Up (6) / Down (8) button. ● Short press the M (7) button to switch between hour and minute. ● Press and hold down the M (7) button to save and exit. And the time in the status bar changes accordingly.
	<p style="text-align: center;">Language</p> 	<p>Setting the system language</p> <ul style="list-style-type: none"> ● In the Settings submenu, select the Language menu option with the Up (6) / Down (8) button. ● Enter the Language submenu with a short press of the M (7) button. ● Select the desired language with a short press of the Up (6) / Down (8) button. ● Press the M (7) button briefly to confirm the selection. At the same time, it will save setting and exit to the Settings submenu automatically. 
	<p style="text-align: center;">Firmware Update</p> 	<p>Update firmware for UNIQUE series</p> <p>Before updating, you need to copy the downloaded firmware program to the memory storage build-in the UNIQUE.</p> <ul style="list-style-type: none"> ● Connect UNIQUE series to the computer and power on UNIQUE. ● Open the UNIQUE_Storage folder and create a new folder names "update" in the computer. ● Copy the downloaded firmware program (.zip) to the update folder in the UNIQUE_Storage. 

		<ul style="list-style-type: none"> ● Then, in the Settings submenu, select the Firmware Update menu option with the Up (6) / Down (8) button. ● Enter the Firmware Update submenu with a short press of the M (7) button. ● Short press the Up (6) / Down (8) to select Yes or No. Select Yes to confirm update and select No to cancel update. ● Confirm your selection with a short press of the M (5) button. ● If Yes is selected, the thermal imaging monocular will update and restart automatically.
	<p style="text-align: center;">Factory Reset</p> 	<p>Restoring factory default settings</p> <ul style="list-style-type: none"> ● In the Settings submenu, select the Factory Reset menu option with the Up (6) / Down (8) button. ● Enter the Factory Reset submenu with a short press of the M (7) button. ● Press the Up (6) / Down (8) button to select Yes or No. Yes means to restore factory settings and No means to cancel the operation. ● Confirm your selection with a short press of the M (5) button. ● If Yes is selected, the thermal imaging monocular will reboot automatically. ● If No is selected, the operation is canceled and the screen returns to the upper menu. <p>After the Factory Reset is selected, the following functions will be restored to default settings:</p> <ul style="list-style-type: none"> - Image mode: white hot - Ultra-clear mode: off



		<ul style="list-style-type: none"> - Display brightness: level 2 - Image sharpness: level 3 - Image contrast: level 2 - Digital zoom: 1× magnification - Wi-Fi: off - Image Hue: C - Video output: off - Calibration mode: A
	<p>Info</p> 	<p>Showing the system information</p> <ul style="list-style-type: none"> ● In the Settings submenu, select the Info menu option with the Up (6) / Down (8) button. ● The relevant information of device will be shown by a short press of the M (7) button. ● This item allows the user to view the following information of the current thermal camera: product model, GUI vision, FPGA, PN, SN, hardware version number, etc. ● Press and hold the M (7) button to return to the Settings submenu. 

16 PIP Function

Picture-in-Picture (PIP) provides a floating window independent of the full screen. This window shows part of the image which is enlarged to 2× in a certain area centered on the reticle of the main image.


- On the home screen, press and hold the **Up button (6)** to turn the PIP function on/off.
- When you press the **Up button (6)** to enlarge the main image,



the image in the PIP window will also be enlarged by 2 times accordingly. For example, if the main image is enlarged by 1×, 2×, 3×, or 4×, the image in the PIP window will be enlarged by 2×, 4×, 6×, or 8× respectively.

17 Stadiametric Rangefinder

- In the home screen, press and hold the **Up (6) + M (7)** buttons at the same time to turn the stadiametric ranging function on/off.
- After this function is enabled, two horizontal lines used for measuring will appear on the screen, and icons of three pre-configured objects and measured values will be displayed on the right side.
- Dimensions of three pre-defined objects are:
 - Deer: 1.7 m high
 - Wild boar: 0.9 m high
 - Hare: 0.2 m high
- Adjust the target to the center of the screen and align the horizontal lines with the target

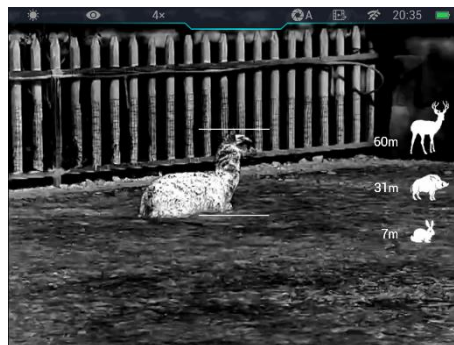

through long or short pressing the **Up (6) / Down (8)** button.

- The icon on the left shows the approximate distance of the corresponding target.
- Long press the **M (7)** button to exit to the stadiametric ranging function.

18 Hotspot Tracking

UNIQUE series provides hotspot tracking function, which allows you to track the hottest object in the image.

- In the home screen, press and hold the **M (7) +Down (8)** buttons at the same time to turn the hotspot tracking function on/off.
- After this function is enabled, a blue box will appear in the image and track the hottest object automatically.




19 Wi-Fi Function

The UNIQUE series has a built-in Wi-Fi module. The device can connect to an external apparatus (computer or mobile phone) via Wi-Fi.


- In the main menu, enable the Wi-Fi on the device (for details of specific operations, refer to the operations of main menu functions).
- After the Wi-Fi is enabled, search for the Wi-Fi named UNIQUE_XXXXXX on the external device, among which XXXXXX is the serial number of the device.
- Select the Wi-Fi, enter the password and connect. The initial password is 12345678.
- After the Wi-Fi connection is established, you can control the device via the mobile app.

Setting Wi-Fi name and password

The UNIQUE series allows you to change the name and password of

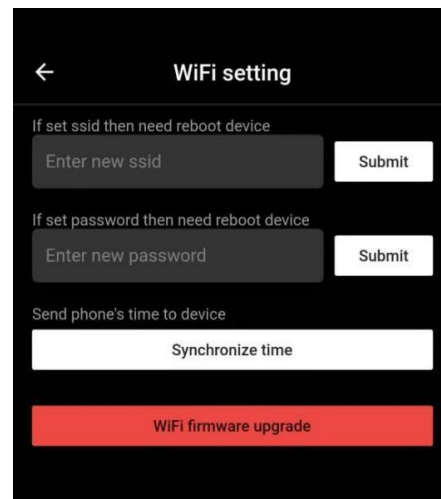

the Wi-Fi in the app.

- In the app, find the settings icon , and touch it to enter the settings.
- In the text box, enter and submit the new Wi-Fi name (SSID) and password.
- After submitting the change, reset the device to activate the settings.

Note: If the device is reset to the factory settings, the name and password of the Wi-Fi will also be restored to the default settings.

20 Update and InfiRay Outdoor

The UNIQUE series thermal camera supports control with **InfiRay Outdoor** App, which allows you to transmit images in real time, operate the device, and update the program by connecting a smartphone or laptop via Wi-Fi.

The user manual of **InfiRay Outdoor** can be downloaded at our official website (www.infirayoutdoor.com).

About InfiRay Outdoor

- You can download and install the **InfiRay Outdoor** App In the official website (www.infirayoutdoor.com) or an app store. Alternatively, you can scan the QR code below to download it for free.



- When installation completed, open InfiRay Outdoor application.
- If your device has been connected to a mobile device, please switch on the mobile data in mobile device. After connection, an update prompt will be displayed automatically in the APP. Click **Now** to download the latest version immediately or click **Later** to update later.
- **InfiRay Outdoor** can store the last connected device automatically. Therefore, once you have connected with **InfiRay Outdoor** before, it will automatically detect the update even when the scope is not connected to a phone or laptop.

- If an update is available and the mobile device accesses the internet, you can download the update first. Then when the device is connected with the mobile device, it will be updated automatically.
- After the update is installed, the device will restart automatically.

21 Technical Inspection

Perform a technical inspection to check the following items each time before you use the device:

- Exterior of the device (no crack on the enclosure).
- Lens and eyepiece (no crack, oil, stain, or other sediments)
- Status of the rechargeable battery (fully charged in advance) and electrical contact (no salinization or oxidation).

22 Maintenance

The maintenance should be carried out at least twice a year and includes the following steps:

- Wipe the surface of metal and plastic parts to clear off dust and dirt with a cotton cloth. Silicone grease may be used for cleaning process.
- Clean the electric contacts and battery slots on the device using a non-greasy organic solvent.
- Check the glass surface of the eyepiece and lens. If necessary, clear off the dust and sand on the lens (it is perfect to use a non-contact method). Use a specialized wiping tool and solvent to clean the optical surfaces.

23 Troubleshooting

The following table lists all problems that are likely to occur during device operation. Check and address problems by referring to this table. If faults not included in this table occur or you cannot fix the fault, return the device to the vendor or supplier for troubleshooting.

Faults	Possible Causes	Solutions
The thermal camera cannot start.	The battery is out of charge	Charge the battery
The device cannot be powered by an external power supply	The USB cable is damaged	Replace the USB cable
	The external power supply is insufficient	If necessary, check the external power supply
Images are too dark	The display is not bright enough	Adjust the display brightness
The image quality is poor or the detection range shortens	These problems are likely to occur when you use the device in harsh weather (such as snow, rain, and fog).	
The device cannot connect to a smartphone or computer	The Wi-Fi password is incorrect	Enter the correct password
	There are too many Wi-Fi networks in the range of the device, which may cause interference	To enable stable network access, you are advised to move the device to an area with a limited number of Wi-Fi networks, or an

		area without Wi-Fi coverage
<p>Wi-Fi signals are lost or interrupted.</p>	<p>The device is beyond Wi-Fi coverage. There is blocking (such as concrete walls) between the device and the receiver.</p>	<p>Move the device to a place where you can receive Wi-Fi signals.</p>
<p>When the device is used at a low temperature, the imaging quality is poorer than that at normal temperature.</p>	<p>At temperatures above 0°C, the temperature rise varies with the observed objects (environment and background) due to different heat conductivity coefficients. As a result, high-temperature contrast occurs and the image quality is better. At low temperatures, the observed targets (background) usually cool down to a similar temperature because of reduced temperature contrast. Therefore, the image quality (details in particular) is poor, which is a characteristic of thermal imaging devices.</p>	

24 Legal and Regulatory Information

Wireless transmitter module frequency range:

WLAN: 2.412-2.472GHz

Wireless transmitter module power < 20dBm



We declare that the Unique series thermal imaging monocular complies with the directives 2014/53/EU and 2011/65/EU.

FCR Statement

FCC-ID: 2AYGT-ZOOM

Labeling requirements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to the user

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the

equipment.

EMC: Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

To comply with RF exposure requirements, a minimum separation distance of 0.00 cm must be maintained between the user's body and the handset, including the antenna.